ICARUS 8
8" e-reader

User Manual

Safety Precautions

On Battery

- Charge the battery only in temperature that ranges from 0 to 35 degree Celsius.
- Do not charge the e-reader if the battery is found damaged or leaking.

On Operation

- Never subject the e-reader to extremes of light, temperature, moisture or vibration.
- Do not use or store the e-reader in a location subject to:

A. Extremely high temperature, such as in a sun-heated car
B. Direct sunlight
C. High humidity or places with corrosive substances
D. Sub-zero conditions, especially during winter.

On micro SD card

- If the e-reader does not respond after inserting a memory card, please take out the card and insert it again.
- Do not remove a micro SD card or turn off the e-reader during data writing or reading to prevent damage to data and to the e-reader.
- Make sure the micro SD card is unlocked before writing or deleting data on the micro SD card.
- Backup your files and data before formatting the micro SD card. Please format the micro SD card in the FAT file system.

Contents

SAFETY PRECAUTIONS ..... **I**

CONTENTS ..... **II**

PARTS AND CONTROL 1
TURNING THE E-READER ON AND OFF 2
CHARGING THE E-READER 3
IMPORTING CONTENTS WITHOUT DRM 4
IMPORTING DRM CONTENTS 5
HOME SCREEN 9
MAIN MENU 11
ONSCREEN KEYBOARD 12
CONNECTING TO THE INTERNET 13
READING BOOKS 14
PLAYING MUSIC 21
VIEWING PHOTOS 22
WEB BROWSER 24
FILE EXPLORER 27
POWER SETTINGS 29
DATE & TIME 29
SYSTEM LANGUAGE 29
FORMAT DEVICE 29

RESTORING DEFAULT SETTINGS 29
DEVICE INFORMATION 29
DRM AUTHORIZATION INFORMATION 29
WI-FI SETTINGS 30
MAINTENANCE 33
PRODUCT SPECIFICATIONS 34
CERTIFICATION INFORMATION 36
COPYRIGHTS AND TRADEMARK NOTICE 37
DISPOSAL AND RECYCLING INFORMATION 38
DISCLAIMER 39

Parts and Control

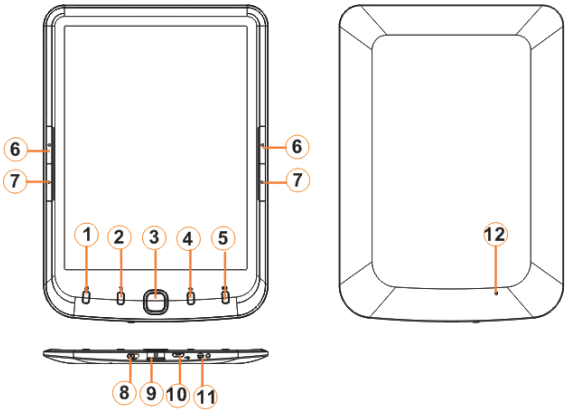

1. Home button- press to return to the home screen

2. Menu button- press to display the options menu

3. Directional buttons/ Enter button

-**Directional buttons** – press the button up/ down/ left/ right to move the cursor

Enter button - Press to confirm or cancel

4. Return button – press once to return to the previous menu, press and hold to return to the Main menu.

5. Keyboard button- press to display/hide the keyboard.

6. Previous page - press to go to the previous page

7. Next page button - press to go to the next page

8. Power button/ Charging indicator – Slide and hold the power button following the arrow for 3 seconds to turn on/off. When the e-reader is being charged, red light is on, when fully charged, red light will go out.

9. Memory card slot – supports micro SD card

10. Mini USB jack – for data transfer and emergency charging.

11. Earphone jack

12. Reset button

Turning the e-reader on and off

- Slide and hold the power button to the right for 3 seconds to turn on the e-reader.
- It may take a few moments for the e-reader to turn on and load the content.
- If the e-reader does not turn on, charging is required as the battery is empty.
- To turn off the e-reader, slide and hold the **Power** button for 3 seconds again: then a **Power off** dialog box will appear. Please select **OK**.

Charging the e-reader

- You need to charge the e-reader prior to using it for the first time or when battery power is low.
- Charge the e-reader using an optional AC adapter with output 5V, 1.5A (ICARUS ACD0052-EU, sold separately)
- Charging through a computer may not be able to fully charge the e-reader due to the low output charging current from a computer's USB port.
- Please turn the e-reader to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the e-reader in standby mode .
- When the e-reader enters the standby mode, slide the **Power** button to wake up the e-reader.
- The battery status is displayed at the bottom left corner. The status is shown as below:

Low battery

Charging

Battery full

Importing contents without DRM

From a computer

- The e-reader supports the USB Mass Storage Device function. It can be accessed like a removable USB drive in a computer's file manager.
- To import contents (ebooks, pictures etc) onto the e-reader, connect the e-reader to a computer via the supplied USB cable.
- Upon successful connection to the computer, the e-reader will enter USB mode and all operations will be halted.
- Go to [My Computer], double click on the e-reader's drive volume ('ICARUS') to open it.
- Perform the desired file management operation like you would with any USB device.

From memory card

This unit supports micro SD cards up to 16GB.

To insert a memory card

Insert the card correctly with the contact pin facing upwards as illustrated below. Push the card in, then you should hear a click when the memory card is inserted correctly. You may damage the card and the e-reader if the micro SD card is not inserted correctly.

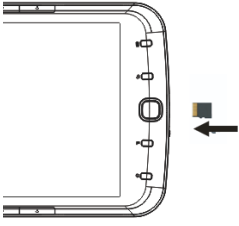

To remove the micro SD card, push the card once again until it is removed from the back of the slot.

When the card is inserted or removed, it will take several seconds to load.

Please avoid inserting or ejecting the card when other operations are running as this may cause the system to hang.

Do not remove the card if the content inside the card is being played. This will halt the operation of the e-reader and cause the e-reader to restart.

Importing DRM Contents

The e-reader supports Adobe DRM contents. Adobe Digital Editions (ADE) is required to manage books with DRM.

Installing Adobe Digital Editions (ADE - free software)

- You can download the installer from http://www.adobe.com/products/digitaleditions/#fp.
- For first time user, you will need to get a free adobe ID from adobe website. click on the [get an Adobe ID online] link as illustrated:

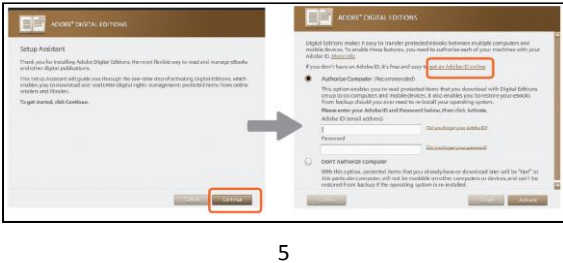

- Enter your email address and complete the online form as per instructed.

Authorizing the computer and the e-reader

- Upon registration, return to the ADE window. Enter the user name and password to activate your Adobe account.
- After activation, connect the e-reader to PC. ADE will detect the e-reader and you are prompted to authorize the device.
- After authorization, you will be able to find the e-reader recognized in ADE as below. Contents inside the e-reader will be displayed on the right hand window.

- You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.
- Purchased or downloaded ebooks will be stored in [My Digital Editions] in [My Documents].

Transferring DRM ebooks to The e-reader

- In the ADE menu, click on [All Items] on the left hand column.
- Items in [My Digital Editions] will be listed in the right window.
- Select the desired item(s) to be transferred, <Shift> + <Left click> to select multiple files.
- Drag and drop the selected item(s) into the e-reader's Drive located on the last row of the left side column as illustrated below.

Notes For using ADE

Each ADE ID supports only 6 devices, this includes the computer, the master device (the e-reader) and the slave device (micro SD card).

When the e-reader is restored to default settings, ALL DRM activation records and data (including DRM books purchased) will be erased from the e-reader. You are required to authorize the device with your ADE ID again in order to be able to access your books again.

When the number of authorized device has exceeded the allowable amount, you will come across the following error message:

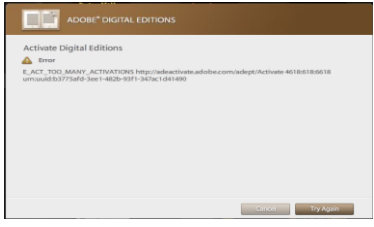

To request for extension and reset of your ADE ID, go to http://www.adobe.com/support/digitaleditions/→ [Submit a web case]. You are required to enter your ADE ID info.

Home screen

When the e-reader is turned on, the Home screen will be displayed.

- Use the directional buttons to select the desired book to open. The selected item will be underlined.
- Press the **Home** button anytime to return to the Home screen.

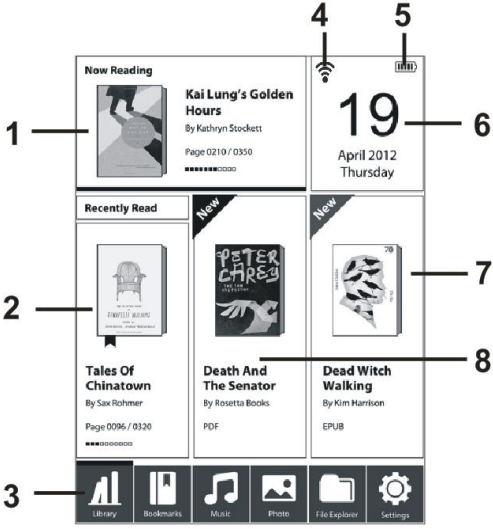

1. Now Reading
-displays the book you read last. Press the **Enter** button to open this book in the last read page.

2. Reading history
-The recently read ebooks will be saved into the Reading history, you can also open books from this Reading history.

3. Main menu
-displays the main menu, press the Directional buttons to select the desired item, then press the **Enter** button to open the item selected.

4. Wi-Fi indication
- displays the Wi-Fi network connection strength.

5. Battery Indicator
-Indicates the battery status.

6. Time & Date
-displays current time and date, you can set this in the Settings Menu.

7. Recently added
-displays the recently added books.

8. Just added
-displays the books added last.

Main menu

Press the Directional buttons to select the desired item, then press the **Enter** button to open the item.

To exit, press the **Return** button.

To open the book library: all ebooks stored on your device

To open the Bookmarks list.

To open the music player

To open the photo viewer.

To opent he File Explorer for advanced file management

To enter the system settings menu

Onscreen keyboard

Use the onscreen keyboard as shown below to enter text.

To enter text, press the directional button to select an input method, and press the **Enter** button at the panel, then use the directional buttons to select the text onscreen keyboard, then press the **Enter** button at the panel.

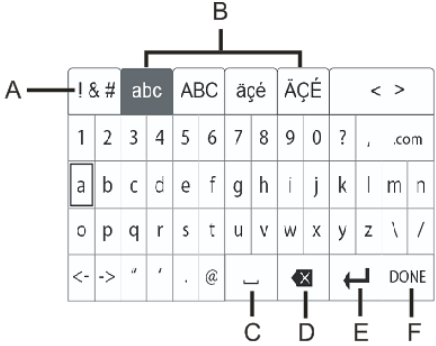

A. Numeric/punctuation/ symbol key

B. Input method key

C. Space key

D. Backspace key

E. Enter key

F. Done key

Connecting to the internet

Turning on Wi-Fi: In the Main menu choose **Settings→ Wi-Fi Setting→Wi-Fi**, Then "√" will appear next to Wi-Fi when you have turned it on.

Joining a Wi-Fi network: press **Wi-Fi setting** to show the detected network list, select a network, if necessary, enter a password and press "**Connect**" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

Reading books

Book library

In the Main menu, select **Library** to open the book library.

- In the book library, select a book to start reading.
- Use the Directional-up/down buttons to scroll through the e-book list.
- Press the **Next/previous page** buttons to turn pages.
- In the Main menu, select **View by** to change the view mode(List/Thumbnail mode).
- This e-reader supports txt, pdf, epub, pdb, fb2, html, and rtf file ormats.

Sorting the book list

- In the book library, books are sorted by author, title, recently read, newly added, favourite etc..
- Press the **Menu** button, then select **Sort by** to choose a sorting method.
- Select the desired book and press the Enter button to start reading.

Searching for books in the library

Use the search feature to search for your desired books in the library.

- In the options menu, select **Search** to display a search bar and the keyboard.
- Type the book name by using the directional and enter buttons and at the panel, then press the **Enter Button** on the keyboard to confirm.

Note: After typing the book name, you can also press the **Keyboard** button to hide the onscreen keyboard, then press the **Enter** button to start the search.

Reading ebooks

Books transferred to the e-reader will be saved in the device.

The e-reader supports ebooks in the following formats: txt,pdf,epub,pdb,fb2,html, rtf,mobi,doc,docx,djvu,zip.

- In the home screen or book library, use the Directional buttons to move the cursor to the desired book and press the **Enter** button to open it.

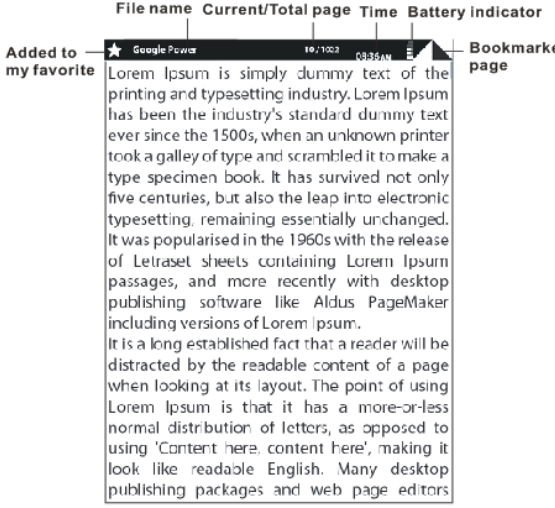
File name
Current/Total page
Time
Battery indicator
Added to my favorite
Bookmarked page
Google Power
10/1002
08:36AM
Lorem Ipsum is simply dummy text of the printing and typesetting industry. Lorem Ipsum has been the industry's standard dummy text ever since the 1500s, when an unknown printer took a galley of type and scrambled it to make a type specimen book. It has survived not only five centuries, but also the leap into electronic typesetting, remaining essentially unchanged. It was popularised in the 1960s with the release of Letraset sheets containing Lorem Ipsum passages, and more recently with desktop publishing software like Aldus PageMaker including versions of Lorem Ipsum.
It is a long established fact that a reader will be distracted by the readable content of a page when looking at its layout. The point of using Lorem Ipsum is that it has a more-or-less normal distribution of letters, as opposed to using 'Content here, content here', making it look like readable English. Many desktop publishing packages and web page editors

Turning pages
While reading a page, press the **Next Page**/**Directional-Right** button to turn to next page. To turn to previous page, press **Previous Page**/**Directional-Left** button.

Using the Options Menu while Reading

While reading a page, press the **Menu** button to display the options menu screen. The options menu will be divided into two pages. Press on **"<"** or **">"** to browse through the available options.

1. Add Bookmark
2. Bookmarks
3. Table of contents
4. Go to page
5. Search
6. Font size
7. Font
8. Line Spacing
9. Margin
10. Text only (Reflow)
11. Rotate Screen
12. Auto flip
13. Page refresh rate
14. Add to favourite
15. About book
16. Music

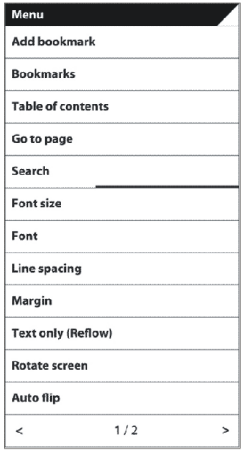

Add Bookmark

In the options menu, select **Add Bookmark** to add a bookmark for the current page. The icon will appear on the top right corner, indicating this page was bookmarked.

Bookmarks

In the options menu, select **Bookmarks** to enter the Bookmark List of the current book.

Table of contents

In the options menu, select **Table of contents** to show the ebook's table of contents.

Go to page

- You can jump to pages using the **Go to Page** option. In the options menu, select **Go to Page**.
- In the Go to Page menu, type the page number via the onscreen keyboard, then press the **Enter** button.

Search

In the options menu, select **Search** to search for the desired words through the current ebook.
Enter the desired words and press the **OK** button on the screen keyboard.

Font Size

- In the options menu, select **Font size** to adjust the font size.
- There are 6 font sizes available: Small, Medium, Large, X-Large, XX-Large, XXX-Large.
- Select the desired font size, then press the **Enter** button to adjust the font size.
- It will take several seconds for the fonts to be resized.

Font

- In the options menu, select **Font** to set the font type of the currently opened ebook. Options available: **Arial, Times, Verdana.**
- Select the desired option, then press the **Done** button to confirm.

Line Spacing

- In the options menu, select **Line Spacing** to set line spacing. Options available: Small, Medium, Large.

Margin

- In the options menu, select **Margin** to set the page margin. Options available: Small, Medium, Large.

Select the desired option, then press the **Enter** button to confirm.

Reflow mode (For PDF format)

In this mode, you may end up with words printed on top of each other if the replacement text is much longer than the original.

- In the options menu, select **Reflow mode** to reflow text on the current page. Options available: On, Off.
- Select the desired option, then press the **Done** button to confirm.

Rotating Screen

- In the options menu, select **Rotate screen** to change the display orientation, each time you press **Rotate screen**, the display screen will be rotated by 90 degrees.
- To return to original orientation, press **Return** once again.

Auto Flip

- In the options menu, select **Auto Flip** to set Auto Flip mode. The auto flip duration available are: Off, 1 Minute, 2 Minutes, 3 Minutes, 4 Minutes, 5 Minutes.
- Select the desired option, then press the **Enter** button to confirm.

Page refresh rate

In the options menu, select **Page refresh rate** to set refresh rate, options available are: After every page, After 3 pages, After 6 pages.

Select the desired option, then press the **Enter** button to confirm.

Add to Favorites

- You can add books to your Favorite List. In the options menu, move the cursor to **Add to Favorites** to add the current book to the Favorite List. The ☆ icon will appear on the top left corner.
- To view books in the Favourite List, press the **Menu** button while in the booklist and select **Favorites**.
- To remove the book from the Favorites:

  While reading a page, press the **Menu** button and select **Remove from Favorite** from the Option Menu.

Book information

In the options menu, select **Book information** to display the book information, such as book title, author, format.

Music

- To set background music mode, go to the option menu and select **Music** to open the music player to play back the desired music.
- Press the **Return** button to go back to reading the book, then you can listen to the music while reading book.

About bookmarks

Adding Bookmarks

When reading, turn to the desired page and open the options menu.Select **Add bookmark** to add bookmark for the current bookpage. And the icon will appear on the top right corner.

Continuing reading from a Bookmark

- In the Main menu, select **Bookmarks** to enter the Bookmark List.
- In the Bookmark List screen, select the desired book bookmarked, then select the page bookmarked.

Deleting Bookmarks

You can choose any of the following methods to delete bookmarks.

- In the Bookmark list screen, press the **Menu** button to show the options menu.

Select **Delete bookmark**, then move the cursor to select the desired items to be deleted.

Playing Music

About the music library

- In the Main menu, press the Music icon to open the music library.
- Press the **Directional-up/down** buttons to scroll through the song list.
- Press the **Menu** button to display the options menu to sort the song list or search the desired song.

Playing songs

In the music library, press the desired song to start playing.

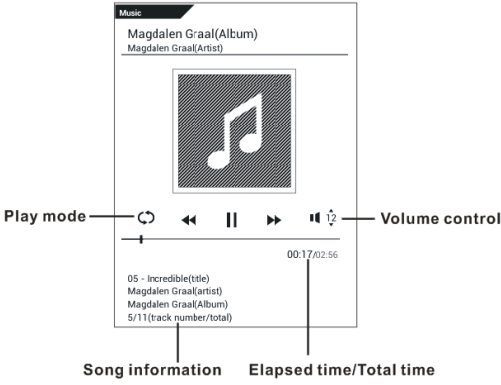

Note: If you wish to exit the music mode, press the play/pause button to stop playback and then press the Return button.

Music player controls

Pause or play	Press ▶/ ⏸.
Play previous or next song.	Press ◀◀/ ▶▶.
Fast rewind or fast forward	Press and hold ◀◀/ ▶▶.
Adjusting the volume level.	Press the **Directional-up/down** button to adjust the volume.
Changing play mode	Press on play mode icon **.**
To return to the Music Library	Press the **Return** button.

Viewing photos

- In the **Main menu**, select **Photo** to open the Photo viewer.
- In the photo library, press the **Menu** button to set List mode/Thumbnail mode.
- Use the **Directional-up/down** button to navigate through the files/folders.
- Press the **Previous/next page** buttons to turn pages.

Opening pictures

- In the photo library, move the cursor to the desired photo, then press the Enter button on the selected photo to view it in full screen display.
- In full screen mode, press the **Directional buttons** / **Previous/next page** buttons to view previous and next picture.

Using the options menu

In full screen mode, press the **Menu** button to display the options menu.

Zooming in/out of pictures

- To zoom in on a picture, in full screen mode, press **Menu** → **Zoom in/out** to select a different zoom level.
- To return to original size, press the **Return** button and normal operation will resume.

Rotating pictures

You can rotate the picture according to your view.

- In full screen mode, press **Menu** → **Rotate 90 clockwise/ Rotate 90 anti clockwise**.
- Each time you press the **Rotate** button, the picture will be rotated by 90 degrees.

Information

In full screen mode, press **Menu→ Info** to display the information about the picture's name, dimension, file size, and file type.

Slideshow

- In full screen mode, press **Menu→ Slideshow** to start.
- From the drop down menu, select 'slide time' to adjust slideshow duration.
- To stop the slideshow, press **Menu→ Slideshow→Off**.

- Press the **Return** button to return to the photo list.

Web browser

Viewing a webpage

- In the home screen, press **Settings→ Browser** to open the web browser.
- Press the address bar at the top of the screen, press and hold to set the input method.
- In the address bar, type the web address and press **Enter**.
- Press a link on a webpage to open a new web page.
- Drag up and down to scroll through a web page.
- In zoom mode, drag left, right, up, down to move the webpage.
- To return to the previous page, press the **Return** button.

Notice：

- The browser will by default open the Google home page.

Using the options menu

Press the **Menu** button to display the browser option menu.

New Window:
Opens a new window.

Bookmarks

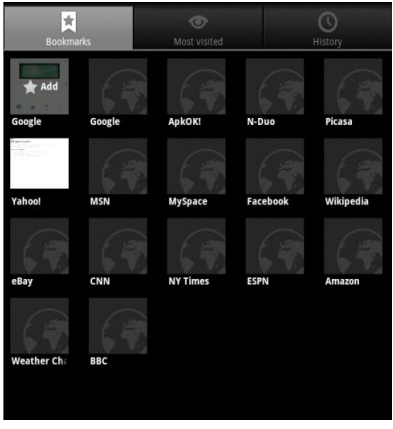

- Bookmarks

This overview list all bookmarks; press a bookmark to open the webpage. Press and hold to display the option menu for a selected bookmark. Press **Add Bookmark** to create a new bookmark for the current webpage.

- Most visited

Press to display the most visited website list.

- History

Open this to view the history list. To remove these lists, press **Menu** button, then select **Clear history**.

Windows
Show the multiple webpage windows opened at a time. press on the desired window to enlarge to full screen mode.

Refresh/Stop
Press **Refresh** to refresh the current page, press **Stop** to stop loading the current page.

Forward:
Press **Forward** to go to the next visited webpage.

More
Use other available functions, including Add bookmark, Find on page, Select text, Page information, Share page, Downloads, Settings.

File Explorer

- In the **Main menu**, select **Explorer** to open the file explorer.
- Press the Directional-up/down button to scroll through the file list.
- Press the **Previous/next page** buttons to turn pages.

Using the options menu

On file list screen, press the **Menu** button to open the options menu.

Searching for files in the file explorer

In the file list, press **Menu** → **Search** to bring up the onscreen keyboard.

- Type the book name by using the directional buttons and the **Enter** button on the onscreen keyboard, then press the **Enter** button on the keyboard to confirm.

Copy / move files or folders

1. In the file list, select the desired files/folders to be copied or moved.
2. Press the **Menu** button to open the Editing menu, then select **Move** or **Copy**.
3. Go to the target folder that you want to put the selected file or folder in.
4. Press **Menu→ Paste**.

Note: it may take a longer time to paste files/folder with a large file size.

Renaming files or folder

1. From the file list, select the desired file/folder to be renamed.
2. Press the **Menu** button to show the edit menu, select **Rename**
3. Press the **Enter** or **Keyboard** button and use the Onscreen keyboard to enter a new file name.
4. Press **OK** to confirm.

Deleting files

- In the **File Explorer**, select the desired files to be deleted
- Press **Menu** → **Delete** to display a deletion screen, select **Yes** to delete.

Note: it may take a longer time to delete files with big file size and quantity.

Sorting files

You can sort files by Internal storage, External storage, USB memory.

Press **Menu** → **view by** to choose a sorting method.

Power Settings

To enable/disable auto power off/ sleep mode; you can also set the time for the auto power off/sleep mode to go into effect.

Date & Time

To set the clock and date, time.
Press the **Directional-left/right** button to move the cursor.
Press the **Directional-up/down** button to adjust the desired value.
Select **YES** to confirm, select **NO** to cancel the setting.

System Language

To set the user interface language for the e-reader.

Format Device

Formats the device to delete the data in the e-reader.

Restoring default settings

To restore the e-reader's settings to defaults.
All settings will be restored. Meanwhile, all DRM contents and activation will be deleted.

Device Information

Displays product information about the e-reader, such as Firmware version, Internal/SD card memory status and so on.

DRM Authorization information

Displays DRM authorization information on the e-reader.

Wi-Fi settings

The Wi-Fi settings allow you manage wireless networks.

Turning on Wi-Fi: In the main menu choose **Settings→ Wi-Fi Setting→Wi-Fi**, Then "√" will appear next to Wi-Fi when you have turned on the Wi-Fi.

Join a Wi-Fi network: press on Wi-Fi setting to show the detected network list, select a network, if necessary, enter a password and press "**Connect**" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

If more than one previously used network is in range, the ICARUS 8 will automatically joins the one last used.

When the e-reader is connected to a Wi-Fi network, the Wi-Fi icon at the top of the screen shows connection strength.

The e-reader is not responding or can't be turned on.

- Reset the e-reader by pressing the Reset button at the back of the unit's housing. The e-reader will be forced to shut down if it is on and you are required to restart the e-reader.
- The Battery has been fully depleted. Please charge the e-reader via USB or an optional USB AC Adapter.

Battery Life seems short

- The operating temperature is below 5°C. this is due to the characteristics of the battery and is not a malfunction
- The battery is not used for a prolonged period. Please recharge the battery of the e-reader again
- The battery is not fully charged. Please charge the e-reader for at least 4 hours.
- The battery needs to be replaced. Please consult ICARUS Support for service.

An ebook cannot be opened

- Copyright protected books cannot be read on any device other than the authorized one.
- Check if the DRM of the book has expired.
- Check if the book format is supported by the e-reader.

The e-reader cannot be operated during USB connection

- The e-reader cannot be operated while it is connected to a computer. This is not a defect but normal behavior of the device.
- Eject the e-reader from the computer to resume operation.
- To use the e-reader while charging, click on the [Safely Remove Hardware] icon located on the left righthand corner of your computer's task bar to

disconnect the data connection with the computer. After the e-reader is safely removed, the computer will only charge the e-reader and you can now resume normal operation.

Maintenance

- If the e-reader does get wet, turn off the e-reader immediately. Wait for the e-reader to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your e-reader in a bag, keep the e-reader in a protecting case to avoid scratches. Beware that a protective case is no guarantee that your device will not get damaged. The e-reader is made of sensitive materials (especially the e-paper screen) and electronics; handle your device with care
- If the e-reader needs service, please consult ICARUS through the contact information provided in the warranty card. Faulty service may void the warranty.

Product Specifications

Display
8.0 inch e-paper screen, 1024x 768 pixels
Brightness: 200cd/m^2

Storage memory
Built in memory: 4 GB (FAT format)
Supports micro SD card up to 16GB (FAT32 format)

Media File Formats supported
Ebook: txt,pdf,epub,pdb,fb2,html,rtf,mobi,doc,docx,djvu,zip
Photo: jpg, bmp,gif, png
Music: mp3, wma, aac, wav, ogg

Connectivity
Data transfer: USB 2.0 High Speed
Audio: 3.5mm audio jack
Power: USB jack

Miscellaneous
Clock / Date
Real time battery indication

Battery life
Reading – up to 40 hours
Standby time- 30 days

Charging
Power supply: 5.0V, 1.5A
Duration: 4 hours (approx)

Minimum system requirement (USB Mass Storage)
Windows 2000, ME, XP, Vista, Win 7
MAC OS X and Linux (with Mass Storage Device Support)

Physical properties

Dimension: 211.6 X 150.0 X 9.0 (mm)(approx.)

※ Design and specifications are subject to change without prior notice

Certification information

On FCC

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

On CE

CE The symbol means that the unit complies with European safety and electrical interference directives.

Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without vendor's permission except for personal use.

Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.

Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Adobe, the Adobe logo, Reader and PDF are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

ICARUS and ICARUS 8 are registered trademarks of ICARUS Reader.

The e-reader contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

Disposal and Recycling Information

Your e-reader must be disposed of properly according to local laws and regulations.
Because this product contains a battery, the product must be disposed of separately from household waste. When your e-reader reaches its end of life, contact your local authorities to learn about recycling options.

Battery Replacement:
The rechargeable battery in it should be replaced only by an authorized service provider.

This symbol on the product or in the instruction means that your electrical or electric equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU,For more information, please contact the local authority or your retailer where you purchased the product.

Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under continuously upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.

Contains The e-reader® Mobile technology by Adobe Systems Incorporated